



# RUT240 LTE Router

Quick start guide v10.0



## Front view

- 1 Power LED
- 2 Power socket
- 3 Mobile network type LED
- 4 SIM holder
- 5 Mobile signal strength indication LEDs
- 6 Ethernet ports
- 7 LAN LED
- 8 WAN LED



- 1
- 4
- 7
- 8

| Power socket pinout |             |            |
|---------------------|-------------|------------|
| No.                 | Description | Wire color |
| 1                   | Power       | Red        |
| 2                   | Ground      | Black      |
| 3                   | Input       | Green      |
| 4                   | Output      | White      |



## Back view

- 1 WiFi antenna connector
- 2 Reset button
- 3 LTE antenna connectors



- 1
- 2
- 3
- 3

## Hardware installation



1. Push the SIM holder button with the SIM needle.
2. Pull out the SIM holder.
3. Insert your SIM card into the SIM holder.
4. Slide the SIM holder back into the router.




5. Attach LTE and WiFi antennas.
6. Connect the power adapter to the socket on the front of the device. Then plug the other end of the power adapter into the power socket.
7. Connect to the device wirelessly (SSID: RUT240\_001E42 \*\*\*\*\* (unique to each device)) or use Ethernet cable and plug into LAN port.

## Configure your computer (Windows)


1. Enable the wireless network connection (go to **Start > Control Panel > Network and Internet > Network and Sharing Center**. In the left panel click **Change adapter settings** link. Right click on **Wireless Network Connection** and select **Enable**).
2. Setup wireless network adapter on your computer (right click on **Wireless Network Connection** and select **Properties**. After that select **Internet Protocol Version 4 (TCP/IP)** and click **Properties**).
3. Select **Obtain IP address automatically** and **Obtain DNS server address automatically** if they are not selected. Click **OK**.

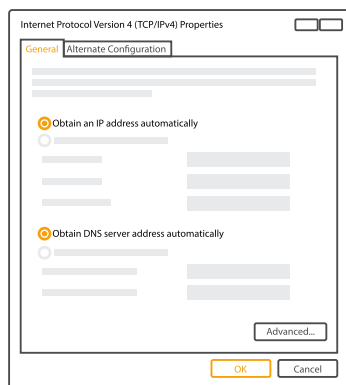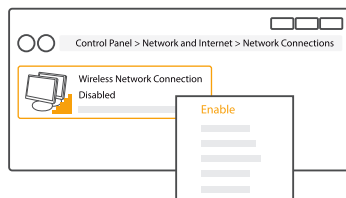

- Right click on [Wireless Network Connection](#) and select [Connect](#) to see available wireless networks.

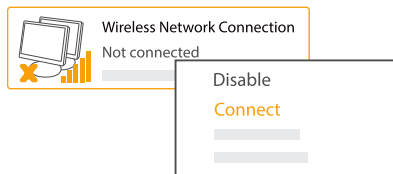

- Choose the wireless network [RUT240\\_001E42 \\*\\*\\*\\*\\*](#) from the list and click [Connect](#).

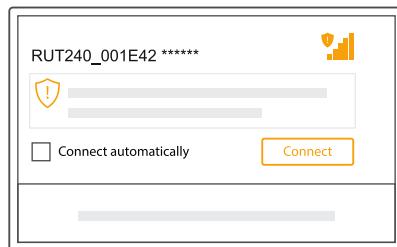

## Login to device

- To enter routers Web interface type <http://192.168.1.1> in your internet browser.
- Use the following parameters when prompted for authentication:

[Authorization Required](#)  
Please enter your username and password

Username

Password

- [Configuration Wizard](#) will start after logging in. It is necessary to complete [Configuration Wizard](#) to setup router to correct mode. You can leave default settings but it is strongly recommended that you change the password and enable [Wireless Security](#).
- Go to [Status > Network information](#) and pay attention to [Signal Strength](#). To maximize the performance try adjusting antennas or changing location of your device to achieve best signal conditions.

Login to device

Mobile

WAN


Wireless

Topology

Access

Mobile Information

Mobile



|                       |                 |
|-----------------------|-----------------|
| Data connection state | Connected       |
| IMEI                  | 868323023148973 |
| IMSI                  | 246021004265840 |
| Sim card state        | Ready           |
| Signal strength       | -79 dBm         |


Safety information

RUT240 router must be used in compliance with any and all applicable national and international laws and with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.


| Specifications                            |   |
|---|---|
| Software                                  | RUT2XX_R_XX.XX.XXX  |
| Frequency bands*                          | EEE802.11b/g/n 2400 MHz, GSM/3G/4G, UMTS/HSPA+  |
| Max. RF power                             | 20 dBm@WiFi, 33 dBm@GSM/GPRS/EDGE, 24 dBm@LTE/WSDMA   |
| Representative accessories specifications |   |
| Power                                     | AC/DC power adapter 9 V 1 A, 4 pin plug   |
| GSM/WCDMA/LTE antenna                     | 703-960/1710-1990/2110-2170/2500-2690 MHz, 50 Ω, VSWR ≤ 2, gain** 1 dBi, omnidirectional, SMA connector |
| WiFi antenna                              | 2401-2462 MHz, 50 Ω, gain** 3 dBi, VSWR ≤ 1.5, omnidirectional, RP-SMA connector                        |

\* Supported frequency bands are dependent on geographical location and may not be available in all markets.


\*\* If an extension cable is used to attach the antenna, the antenna gain may be higher by the amount of cable attenuation. The user is responsible for the compliance with the legal regulations.



This sign on the package means that it is necessary to read the Users Manual before you start using the device.



This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.



Hereby, Teltonika declares that the radio equipment type RUT240 is in compliance with Directives: 2014/53/EU, 2014/35/EU, 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://teltonika.lt/product/rut240/>